

**MAX**  
PROTECTION**OXFORD**

# SIZING GUIDE

PLACE THIS LINE ON THE NAPE OF THE NECK  
& MEASURE THE DISTANCE TO THE WAISTLINE





3 technical elements combine to create an advanced back protection system:-

3DX (Impact Foam)

HEXCORE

AID (Absorption Insert Disc)

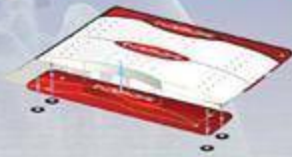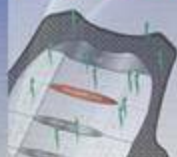

A hard outer shell offers the following benefits over soft protectors:-



ANTI-PUNCTURE



ANTI-IMPACT



ANTI-INVERSION

THIS PRODUCT EXCEEDS CE STANDARD EN1612-2

**JUNIOR / LADIES - SMALL**

350mm

OB155 4 PLATE

**LADIES - MEDIUM**

400mm

OB154 5 PLATE

**LADIES - LARGE**

420mm

OB153 6 PLATE

**MENS - MEDIUM**

450mm

OB152 6 PLATE

**MENS - LARGE**

480mm

OB151 6 PLATE

**MENS - XL**

520mm

OB150 7 PLATE

## CE LEVEL 2 BACK PROTECTOR

The European standard EN1612-2 contains level 1 and level 2. Level 2 is the most stringent.

[WWW.OXPROD.COM](http://WWW.OXPROD.COM)